

#### **Plastic Adirondack Chair**

IMPORTANT. RETAIN FOR FUTURE REFERENCE. READ CAREFULLY.




# (!) Notice

- 1. Do not use electric screwdriver.
- 2. Two people are required to assemble this item. Assemble the item on a flat, solid and even surface.
- 3. Make sure that all the necessary parts are in the carton before starting the assembly.
- 4. Please secure all parts and bolts loosely, only when the frame is complete should you fully tighten the screws.
- 5. If any instability occurs, loosen the screws, re-align the components as necessary and re-tighten the screws evenly.
- 6. This item is not a climbing frame or toy.
- 7. Danger of suffocation. Keep out of reach of children.


#### **Tools Required**



# **Hardware List**

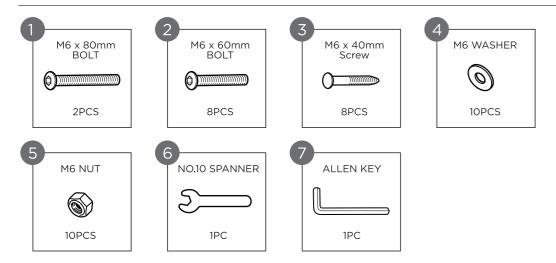

## **Parts List**

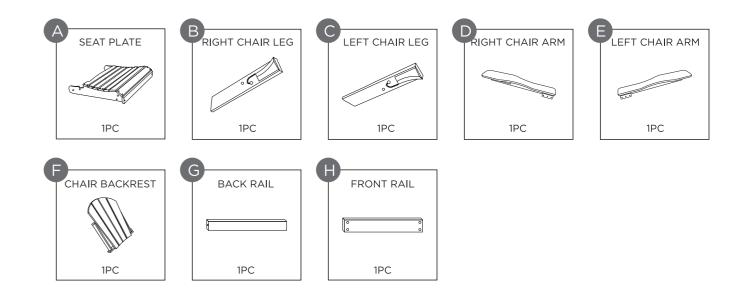


## **Product Assembly**




First Step: Connect part A (Seat plate) to parts B and C (seat leg), please properly adjust the angle of part A and parts B and C, then insert the pins (parts B and C) to the both sides of the seat legs to the end. Pay attention the pin is to the top hole.


Second Step: Using Hardware ② (M6\*60mm Bolt) to the bottom hole of parts B and C (seat leg) and part A (Seat plate). Then use Hardware ④ (Washer) and Hardware ⑤ (M6 Nut) to screw tightly as shown in the picture.

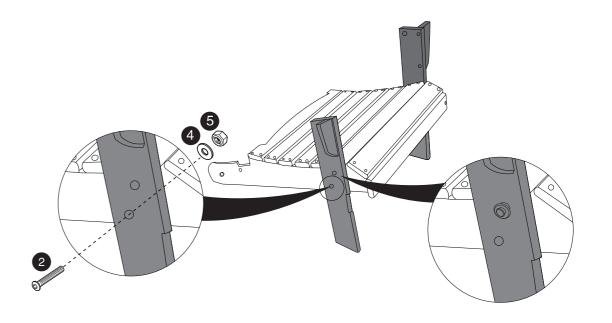

2

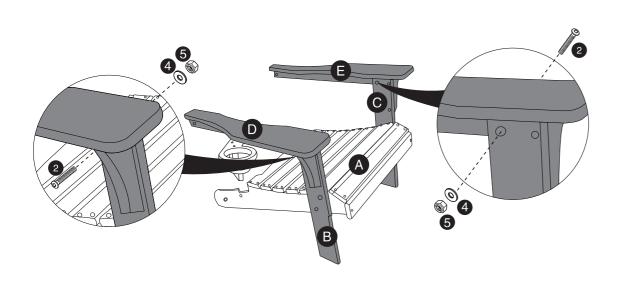


Attach part F (back panel) to the armrests using Hardware 1 (M6 x 80mm Bolt). Hardware 4 (Washer) and Hardware 5 (M6 Nut).

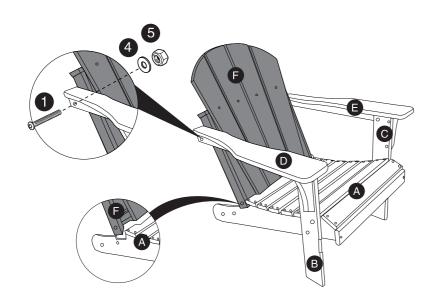



Connet part G (back cross-piece) to the seat panel using Hardware ③ (M6 x 40mm Screw). Secure part H (front cross-piece) to B (right leg) & C (left leg) using Hardware ③ (M6 x 40mm Screw). Congratulation! You finishes the assembly of this Adirondack Chair.

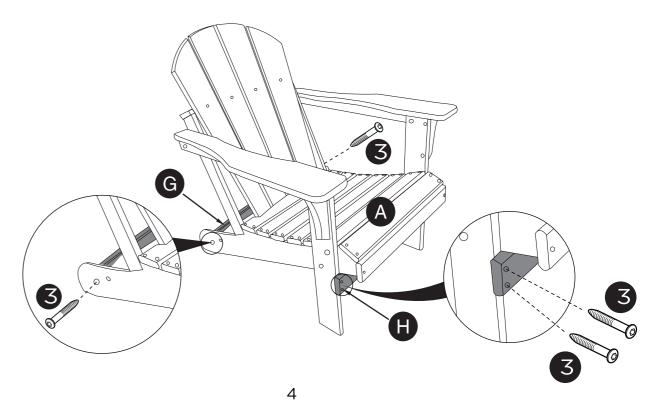

Livingscape™ is a trademark of Mid-States Distributing, LLC. © Manufactured for and distributed by Mid-States Distributing, LLC Fort Worth, TX 76137 USA. For questions or comments please call 888-376-7375. Made in China.